

RS850 Ninja Master Installation Guide

READ THIS GUIDE IN ITS ENTIRETY BEFORE INSTALLING YOUR NEW NETWORKS!

Please note: This is not intended to be an all-encompassing step by step guide to crossover installation but it will give you enough information to take care of the basics. If you have any questions, please do not hesitate to email us at info@skiingninja.com

What you will need:

- Soldering iron
 - Philips Head Screwdriver
 - 3mm or 1/8" Allen wrench
1. To begin you must remove all 6 front drivers. The Allen screws that hold these in are either 3mm or 1/8" depending on time of production. De-solder and set aside.
 2. Remove and de-solder the old crossover.
 3. Use the supplied SPAX screws to secure the new crossover to the side of the cabinet.
 4. Once all the screws are tightened, you can begin soldering the wires to the tabs on the drivers.

Unlock the Potential in Your Loudspeakers



Continues on page two...

SKIING NINJA LLC

Wellington, CO 80549

info@skiingninja.com

RS850 Ninja Master Installation Guide

Continued from page one ...

5. From the diagram on page 3, you will notice the woofers are connected to each other. We have supplied 14 inch jumper wires for this. Go slow when connecting the woofers and pay special attention to the polarity for each set as it changes. The larger tab on each woofer is positive.
6. We suggest reinstalling only two screws in each driver in opposite corners and testing by connecting the speaker to your system before installing and tightening every screw to ensure proper operation. Don't play your system too loudly or evaluate the sound quality until full reassembly is complete.
7. On the new network, there are IN+ and IN- wires. Locate these wires. Next, locate the wire leading from the positive (red) binding post. Desolder the wire and solder on the new wire. If you don't want to solder to the binding post directly, place a piece of heat shrink tubing over the binding post wire and slide down the wire to get it out of the way. Holding together the IN+ wires from the new network, mate up with the wire leading from the positive (red) binding post and solder all together. Use a hair dryer or heat gun to shrink the tubing over the new connection. Repeat for IN- (negative).

Unlock the Potential in Your Loudspeakers



Continues on page three...

SKIING NINJA LLC


Wellington, CO 80549

info@skiingninja.com

RS850 Ninja Master Installation Guide

Continued from page two ...

RS850 woofer connections:

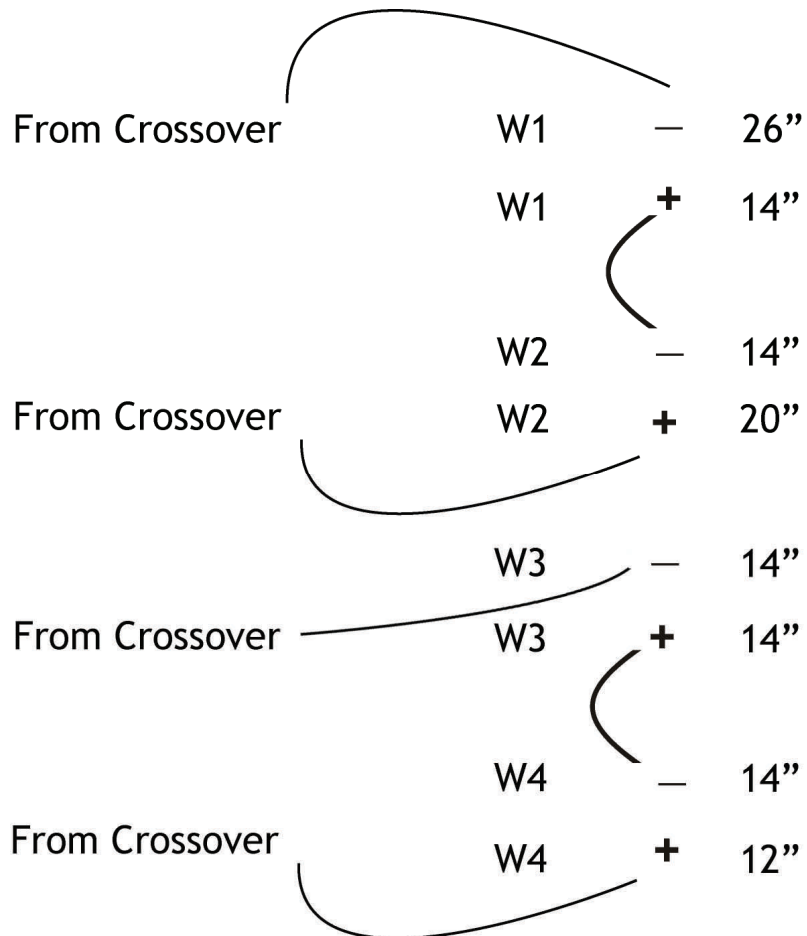

Unlock the Potential in Your Loudspeakers



SKIING NINJA LLC

Wellington, CO 80549

info@skiingninja.com