

# SKIING NINJA

Wellington, Colorado | [www.skiingninja.com](http://www.skiingninja.com)

Emergency Tech Support | 720.335.2261

Install  
Guide



REFERENCE 3  
CABINET UPGRADE

## Included in the Box:

All pieces are numbered.

#1 - 8 pieces	#6 - 2 pieces	2 Silver Speaker Labels
#2 - 8 pieces	#7 - 4 pieces	
#3 - 8 pieces	#8 - 2 pieces	
#4 - 6 pieces	#9 - 2 pieces	
#5 - 2 pieces	#10 - 4 pieces	

## Tools you will need:

- Putty knife or paint scraper
- Heat gun or hair dryer with high setting
- Straight edged razors
- 3mm Allen, 1/8" Allen or T15 Torx (depends on time of production)
- Box Cutter or heavy duty scissors

## Helpful Hint:

**Read this entire guide before starting the install - we mean it!**

---

Mrs. Ninja has given this install a EASY PEASY because the glue used to adhere the stock 'dampening material' to the sides of the cabinet is just hot glue and easily comes off.

Try to remove all globs of hot melt and the small beads of run off from the cabinet building. To have the NoRez stick well it needs to be as close to the wood as possible.


Finally, do a dry run of all the pieces to check the fitting. Due to cabinet manufacturing variation, some trimming of the NoRez pieces may need to be done. A box cutter or heavy duty scissors will work.

Congratulations - Welcome to The Way to Audio Nirvana by Skiing Ninja...


1. **T**o begin you must remove the drivers. YOU do not have to remove the super or Vifa tweeter because we will not be working in that section.
2. **I**f you are upgrading your crossover networks with Skiing Ninja networks, remove the stock crossover networks before you continue.
3. **R**emove the existing dampening material. Most of it will not be reused so it is OK to tear it.

It is important to remove as much of the residual adhesive that is stuck to the cabinet walls as possible. To aid in removal, use a putty knife or paint scraper. If you are having trouble, use a heat gun or hair dryer to loosen the glue. Vacuum and/or wipe the off the cabinet


4. Start with the very top of the cabinet by placing the number 8 piece centered withing the space.
5. You will then go down each side of the cabinet with the assistance of the drawings of the left and right sides. The x'ed out areas are the sealed tweeter section and the filled fifth chamber. You will nto have to sork at all in these.

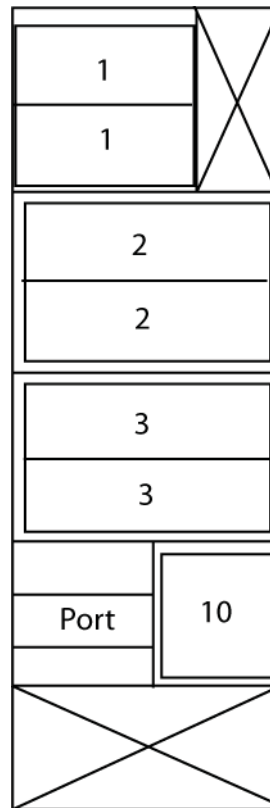

Left Side

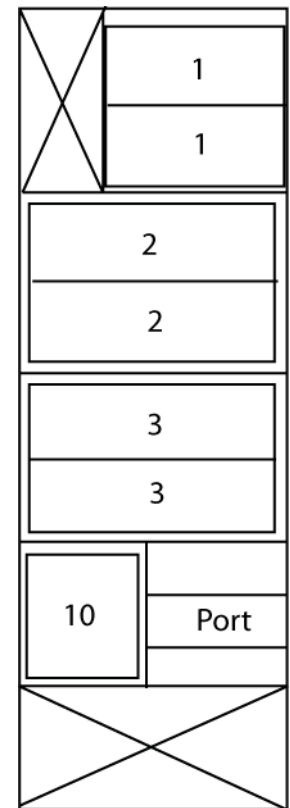

Right Side

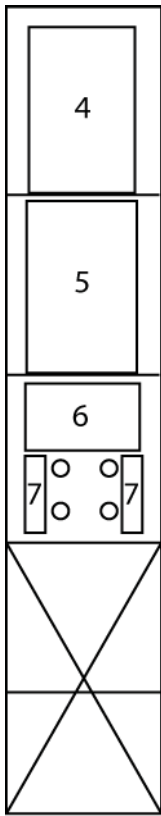

Back

6. The back of the cabinet, start at the top and work your way down. The x'ed out area is that of the filled fifth chamber and the are you are unable to reach because of the port.
7. Behind the tweeter section place a number four piece snug with the top of the cabinet and centered between the side NoRez pieces.
8. The fourth chamber has the port in it so it cannot be filled all the way. However, place a number four piece opposite the port on the front wall. The number 9 piece is for the very bottom of the chamber.

