

RS850/1000 NoRez Kit Installation Guide

Congratulations! You are now on your way to unlocking the potential in your speakers.

We have provided everything you need to improve the sound of your Rocket speakers.

Please inspect the contents of your kit for the following: items:

- | | |
|------------------------------|---|
| ALL BLOCKS SHOULD BE LABELED | 5. 2 pieces |
| 1. 10 pieces | 6. 2 pieces |
| 2. 8 pieces | & 2 Silver Skiing Ninja Speaker Labels |
| 3. 4 pieces | <u>If you have a RS1000 you will have additional pieces. Look for them on page 3.</u> |
| 4. 8 pieces | |

A few Tips...

1. To begin you must remove the drivers. The Allen screws that hold these in are either 3mm or 1/8" depending on time of production. De-solder and set aside.
2. When removing the existing dampening material, use a knife or blade (we suggest a paint scraper for best results) to scrape the majority of the remaining hot glue from the cabinet walls so the new dampening material will adhere more evenly.
3. **You will not be installing anything in the top mid/tweeter and in the 850 in the very lowest section of the cabinet. Leave the original material in place.**
4. If you are installing a upgraded crossover from Skiing Ninja remove the existing crossover networks and follow the instructions for installing the new crossover boards before continuing with NoRez installation. See diagram 1.1 of the following pages for correct placement of your new crossover network boards. After your new boards are installed, you are ready to continue installing the NoRez.
5. Before you take of the backing off any piece, do a dry run of all the pieces to see how they fit. Due to manufacture variations some trimming may need to be done. A strong pair of scissors or box cutter works well.
6. The adhesive on the NoRez is pressure sensitive so press firmly all over the piece.
7. Reconnect the wiring after all the NoRez has been attached.

Unlock the Potential in Your Loudspeakers



Continues on page two...

SKIING NINJA LLC

Wellington, CO

E-mail: sales@skiingninja.com

RS850/1000 NoRez Kit Installation Guide

Continued from page one ...

Installation: All instructions are given based on the view through the openings of the drivers for the second and third chambers.

Down the left side (diagram 1.1)
1 flush with top and back
2 flush with last piece and back
2 flush with last piece and back
3 behind crossover flush with back
3 in front of crossover

Down right side (diagram 1.2)
1 flush with top and back
2 flush with last piece and back
2 flush with last piece and back
1 flush with brace and back
1 flush with last piece and back
1 flush with last piece and back


Top of the second chamber:
5 Notch out for wires with scissors

Down back wall
4 Notch out for ports (diagram 1.3)


Bottom of third chamber in RS1000:
6 flush with back



Left Side
(diagram 1.1)

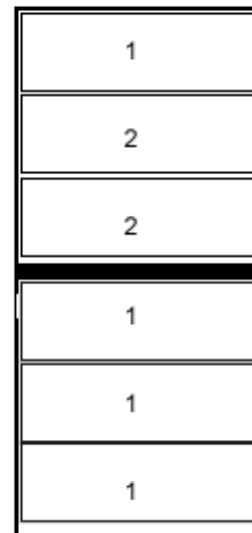

Right Side
(diagram 1.2)

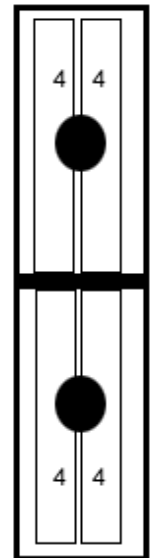

Back
(diagram 1.3)

Unlock the Potential in Your Loudspeakers



Continues on page three...

SKIING NINJA LLC

1855 Gordon Dr
Erie, CO 80516
E-mail: sales@skiingninja.com

RS1000 BH5 Addition Kit

Continued from page two ...

If you have purchased a RS1000 Dampening Material Kit you will have the following additional pieces. Please inspect the contents of your kit for the following: items:

ALL BLOCKS SHOULD BE LABELED

7. 4 pieces

8. 2 piece

9. 2 piece

10. 2 piece

A few Tips...

1. The BH5 will only be installed in the woofer chamber; unscrew the 8" woofer and the amplifier (#2 Phillips) and set aside.
2. Remove the existing dampening material (polyfill).
3. Before you take off the backing off any piece, do a dry run of all the pieces to see how they fit. Due to manufacture variations some trimming may need to be done. A strong pair of scissors or box cutter works well.
4. The adhesive on the BH5 is pressure sensitive so press firmly all over the piece.
5. Reconnect the wiring after all the BH5 has been attached.
6. Replace the polyfill material back in the woofer chamber before you reinstall amplifier.

Installation: All instructions are given based on the view through the opening at the back of the woofer cabinet.

Starting on the left side: # 8 centered

On the top and bottom: #7 flush with back

On the right side: # 10 under driver

On the back: #9 centered

Unlock the Potential in Your Loudspeakers



SKIING NINJA LLC

1855 Gordon Dr

Erie, CO 80516

E-mail: sales@skiingninja.com