


SKIING NINJA

Wellington, Colorado | www.skiingninja.com

Emergency Tech Support | 720.335.2261

Install
Guide

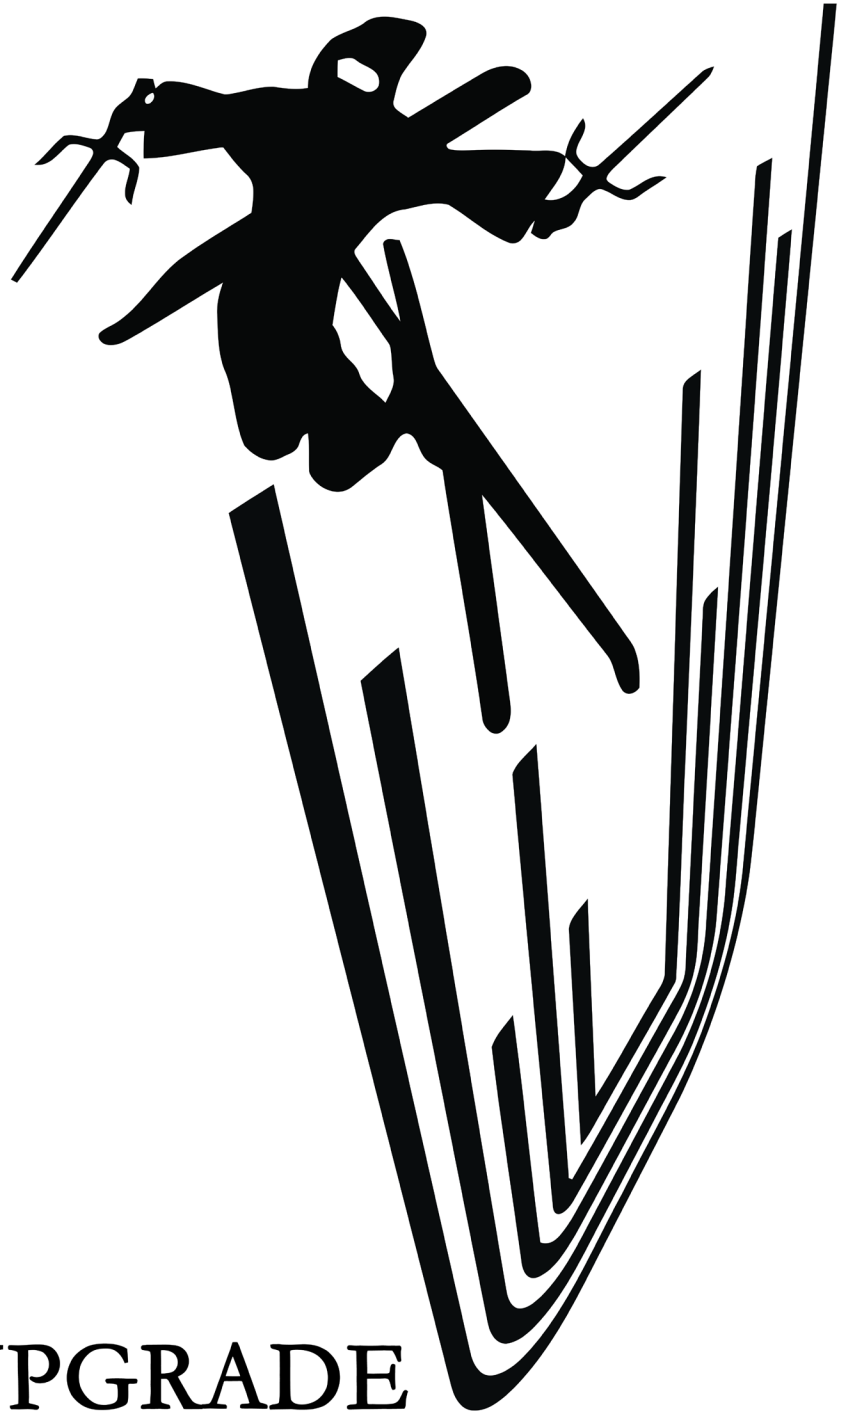

X-STATIK
CABINET UPGRADE

Included in the Box:

All pieces are numbered.

#1 - 4 pieces	#6 - 2 pieces	2 Silver Speaker Labels
#2 - 4 pieces	#7 - 2 pieces	
#3 - 4 pieces	#8 - 2 pieces	
#4 - 4 pieces	#9 - 2 pieces	
#5 - 2 pieces	#10 - 2 pieces	

Tools you will need:

- Putty knife or paint scraper
- Heat gun or hair dryer with high setting
- Straight edged razors
- 3mm Allen, 1/8" Allen or T15 Torx (depends on time of production)
- Box Cutter or heavy duty scissors

Helpful Hint:

Read this entire guide before starting the install - we mean it!

Mrs. Ninja has given this install a VERY HARD because the glue used to adhere the stock 'dampening material' to the sides of the cabinet is truly a bitch to remove.

Unless your heat gun is very small you will not be able to reach the top back corner of the speaker to scrape it down. Use a straight edged razor to scrape down as much of the furry dampening material remains as you can. To have the NoRez stick well it needs to be as close to the wood as possible.

Be careful to keep the heat gun at a safe distance from the glue and dampening material it will melt and smell very bad. Plus, it makes it more difficult to separate from the MDF.

Finally, do a dry run of all the pieces to check the fitting. Due to cabinet manufacturing variation, some trimming of the NoRez pieces may need to be done. A box cutter or heavy duty scissors will work.

Congratulations - Welcome to The Way to Audio Nirvana by Skiing Ninja...

1. **T**o begin you must remove the woofers, tweeter and bottom door. De-solder and set aside.
2. **I**f you are upgrading your crossover networks with Skiing Ninja networks, remove the stock crossover networks before you continue.
3. **R**emove the existing dampening material. Most of it will not be reused so it is OK to tear it.

It is important to remove as much of the residual adhesive that is stuck to the cabinet walls as possible. To aid in removal, use a putty knife or paint scraper. If you are having trouble, use a heat gun or hair dryer to loosen the glue. Vacuum and/or wipe the off the cabinet walls to remove debris before starting the installation.


Sides:


Top Chamber - #1

Second Chamber - #2

Third Chamber - #3

Fourth Chamber - #4

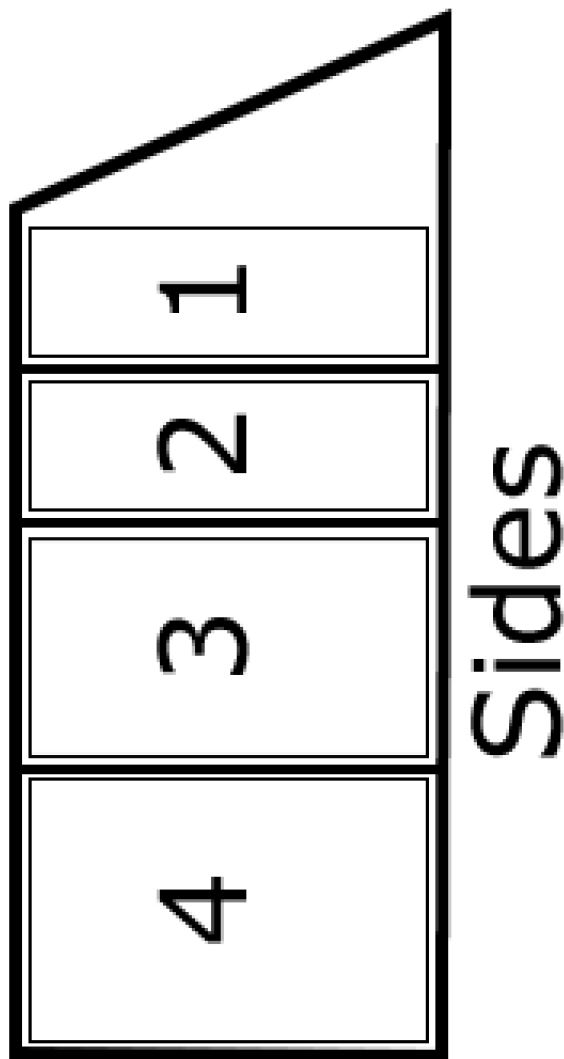

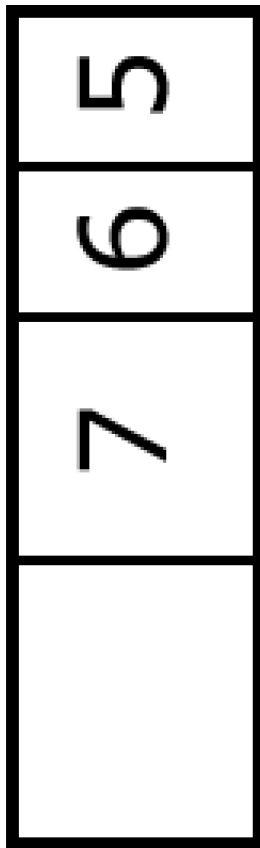

Back

Back:

Top Chamber - #5

Second Chamber - #6

Third Chamber - #7

Fourth Chamber - Skip

(If you have ordered a Skiing Ninja Binding Post upgrade make sure to have installed it before installing the NoRez.)

Top: #8

Front of bottom Chamber: #9

Optional: #10

(If you have a new x-static Ninja Master QXX this piece will go where you removed the stock crossover on the bottom door.)

